


REPAIR PARTS

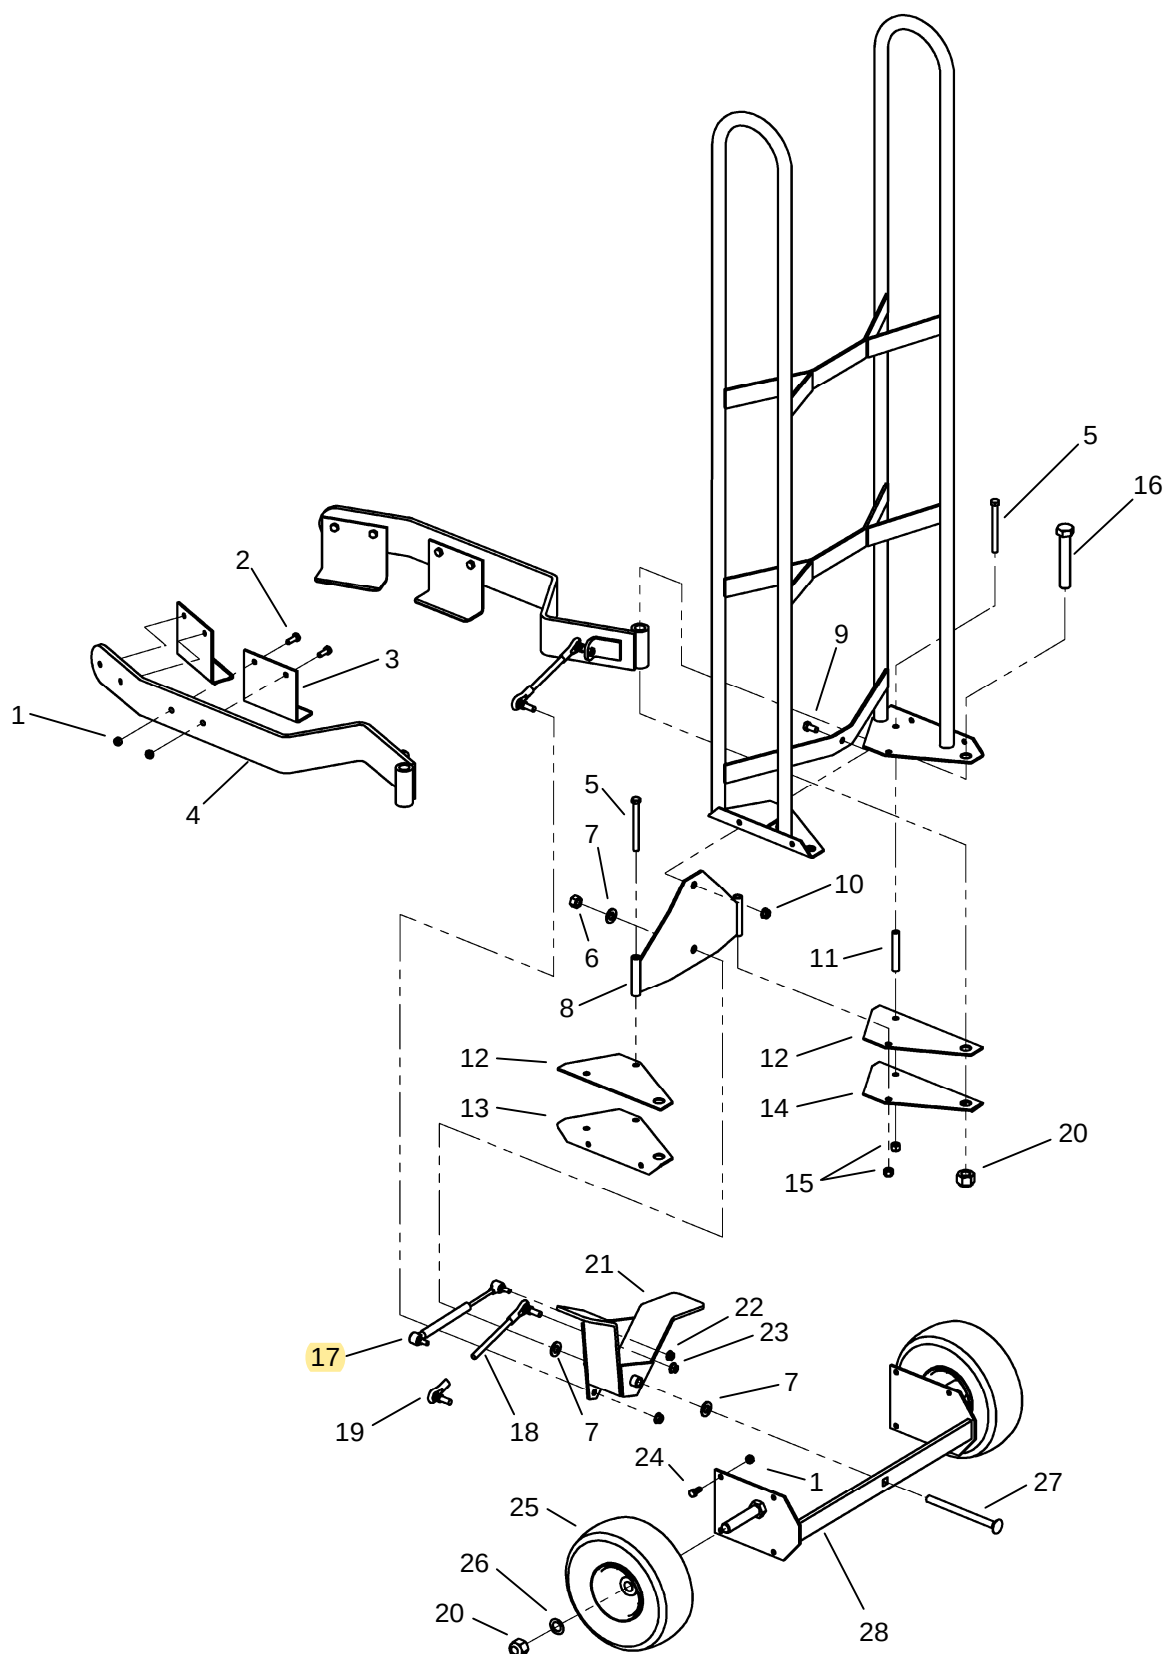

REPAIR PARTS

ITEM	PART NO	QTY	DESCRIPTION
1	055-145	16	5/16-18 Nylon Hex Lock Nut
2	028-060	8	5/16-18 X 7/8 Hex Head Cap Screw
3	72-0108	4	Tire Rest
4	03-0337	2	Arm
5	028-341	4	3/8-16 X 4 Hex Head Cap Screw
6	055-058	1	1/2-13 By-Way Hex Lock Nut
7	108-044	3	1/2 SAE Flat Washer
8	03-0338	1	Support Plate
9	028-133	1	3/8-16 X 3/4 Hex Head Cap Screw
10	055-103	1	3/8-16 Serrated Flange Hex Lock Nut
11	268-494	2	Spacer Tube
12	046-072	2	Arm Pad
13	111-468	1	Arm Bracket - Left
14	111-469	1	Arm Bracket - Right
15	055-154	4	3/8-16 Nylon Hex Lock Nut
16	028-335	2	3/4-10 X 4-1/2 Hex Head Cap Screw
17	01-0203	1	Gas Spring
18	149-315	2	Threaded Rod
19	107-093	4	Rod End
20	055-157	4	3/4-10 Nylon Hex Lock Nut
21	03-0339	1	Pedal
22	055-105	2	5/16-18 Serrated Flange Hex Lock Nut
23	51-0022	4	3/8-24 Serrated Flange Hex Lock Nut
24	028-012	8	5/16-18 X 3/4 Hex Head Cap Screw
25	106-016	2	Wheel
26	039-002	2	3/4 Machine Bushing
27	50-0100	1	1/2-13 X 6-1/2 Carriage Bolt
28	878-033	1	Wheel Bracket